

5 Circuit-switched call control procedures

This clause provides the D-channel signalling procedures in support of circuit-mode bearer capabilities other than multirate (64 kbit/s base rate).

Extensions to this basic protocol and exceptions that apply in the case of packet-mode connections or of circuit-mode multirate (64 kbit/s base rate) or supplementary services are described elsewhere in this Specification.

The call states referred to in this clause cover the states perceived by the network, states perceived by the user, and states which are common to both user and network. Unless specifically qualified, all states described in the following text should be understood as common (see 2.1.1 and 2.1.2 for user and network call states respectively). An overview diagram of call states is given in Figures A.2 and A.3 (see Annex A).

Detailed specification and description language (SDL) diagrams for the procedures specified in this clause are contained in Figures A.4 through A.6. When there is an ambiguity in the narrative text, the SDL diagrams in Figures A.4 through A.6 should be used to resolve the conflict. Where the text and the SDL are in disagreement, the text should be used as the prime source.

NOTE 1 – This clause describes the sequences of messages associated with the control of circuit-switched connections. Optional extensions to this basic protocol and exceptions that apply in the case of packet-mode connections or supplementary services are described elsewhere in this Specification, in Recommendation Q.932 [4] or the Q.95x-Series Recommendations [83]. Annex D also contains extensions to the basic call establishment procedures defined in clause 5 for symmetric signalling.

All messages in this Specification may contain two types of information elements, functional and/or stimulus. Functional information elements are characterized as requiring a degree of intelligent processing by the terminal in either their generation or analysis. Stimulus information elements, on the other hand, are either generated as a result of a single event at the user/terminal interface or contain a basic instruction from the network to be executed by the terminal.

As a general principle, all the messages sent by the network to the user may contain a Display information element whose contents may be displayed by the terminal; the content of this information element shall be network dependent.

NOTE 2 – Keypad facility information elements shall be conveyed only in the direction user to network. Display information elements shall be conveyed only in the direction network to user.

In addition to the messages exchanged as described in the following subclauses, INFORMATION messages for call control may be sent by the user or by the network only after the first response to a SETUP message has been sent or received, and before the clearing of the call reference is initiated. An INFORMATION message received in the Release Request state may be ignored.

In order to accommodate the transfer of Layer 3 messages which exceeds the data link layer maximum frame length (i.e. defined in Recommendation Q.921 [3]), a method of message segmentation and reassembly may optionally be implemented as described in Annex H. Message segmentation shall only be used where all the information comprising the unsegmented message is available at the time of sending the first message segment. Message segmentation is not currently supported.

NOTE 3 – Message segmentation is not used to replace existing procedures where information is yet to be provided by call control, e.g. digit by digit sending in overlap mode, although this may be used in addition. Message segmentation shall only be used when the message length exceeds the value of the N201 parameter defined in Recommendation Q.921 [3].

5.1 Call establishment at the originating interface

Before these procedures are invoked, a reliable data link connection must be established between the user (TE/NT2) and the network. All layer 3 messages shall be sent to the data link layer using a DL-DATA request primitive. The data link services described in Recommendations Q.920/I.440 [45] and Q.921 [3] are assumed.

5.1.1 Call request

A user initiates call establishment by transferring a SETUP message across the user-network interface. Following the transmission of the SETUP message, the call shall be considered by the user to be in the call initiated state. The message shall always contain a call reference, selected according to the procedures given in 4.3. In selecting a call reference, the dummy call reference value shall not be used in association with the basic call. The bearer capability information element is mandatory in the SETUP message, even in the case of overlap sending.

If the user knows all appropriate channels controlled by the D-channel are in use, it shall not transfer a SETUP message across the user-network interface. If the user does not monitor the status of channels in use, it may send a SETUP during an all channels busy condition. In this case the network returns a RELEASE COMPLETE message with cause No. 34, *no circuit/Bchannel available*.

Furthermore the SETUP message may also contain all or part of the call information (i.e. address and facility requests) necessary for call establishment depending on whether *en-bloc* or overlap procedures are being used respectively (see 5.1.3).

If *en-bloc* sending is used, the SETUP message shall contain all the information required by the network to process the call, and, in particular, the called party address information if present, is contained as follows:

- a) in the called party number information element possibly completed by the called party subaddress information element; or
- b) the keypad facility information element which may also be used to convey other call information.

NOTE – The support of a) is mandatory in all networks. Whether the support of b) is mandatory or optional requires further study. Telecom supports both (a) and (b).

If *en-bloc* sending is used, the SETUP message may contain the sending complete indication (i.e. either the Sending complete information element or the “#” character within the Called party number information element). It is mandatory for the network to recognize at least one of the sending complete indications. It is for further study which sending complete indication is preferred. Telecom supports both the Sending complete information element and the “#” character. For overlap sending, see 5.1.3.

Called party subaddress information, if present, shall be given in the Called party subaddress information element and, in the case of overlap sending, shall be sent only in the SETUP message.

5.1.2 B-channel selection – Originating

In the SETUP message, the user will indicate one of the following:

- a) channel is indicated, no acceptable alternative [i.e. channel is indicated by the information channel selection field of octet 3 (bits 2-1) and, if applicable, octet 3.3, and the preferred/exclusive field (bit 4 of octet 3) is set to “1” in the Channel identification information element]; or
- b) channel is indicated, any alternative is acceptable [i.e. channel is indicated by the information channel selection field of octet 3 (bits 2-1) and, if applicable, octet 3.3, and the preferred/exclusive field (bit 4 of octet 3) is set to “0” in the Channel identification information element]; or
- c) any channel is acceptable [i.e. either the information channel selection field of octet 3 (bits 2-1) of the Channel identification information element indicate “any channel” or the Channel identification information element is not present].

If no indication is included, alternative c) is assumed. In cases a) and b), if the indicated channel is available, the network selects it for the call.

In case b), if the network cannot grant the preferred channel, it selects any other available B-channel associated with the D-channel. In case c), the network selects any available B-channel associated with the D-channel.

NOTE – It is recommended that TEs connected to the ISDN basic access in a point-to-multipoint configuration use alternative c) for basic circuit-switched call control unless the TE is already using a given B-channel.

The selected B-channel is indicated in the Channel identification information element coded as “channel is indicated, no acceptable alternative” in the first message returned by the network in response to the SETUP message (i.e. a SETUP ACKNOWLEDGE or CALL PROCEEDING message). After transmitting this message, the network shall activate the B-channel connection.

The user need not attach until receiving a CALL PROCEEDING/SETUP ACKNOWLEDGE/PROGRESS/ALERTING message with the progress indicator No. 8, *in-band information or appropriate pattern is now available* or progress indication No. 1, *call is not end-to-end ISDN; further call progress information may be available in-band*. Prior to this time, the network cannot assume that the user has attached to the B-channel. After this time, the user shall be connected to the B-channel, provided the equipment does not generate local tone. Upon receipt of the CONNECT message the user shall attach to the B-channel (if it has not already done so).

In case a) if the specified channel is not available, and in cases b) and c) if no channel is available, a RELEASE COMPLETE message with cause No. 44, *requested circuit/Bchannel not available* or No. 34, *no circuit/Bchannel available*, respectively, is sent by the network as described in 5.3.

In case a), if the specified channel does not exist, cause No. 82, *identified channel does not exist* is included in the RELEASE COMPLETE message.

5.1.3 Overlap sending

If overlap sending is used, the SETUP message contains either:

- a) no called number information; or
- b) incomplete called number information; or
- c) called number information which the network cannot determine to be complete.

On receipt of such a SETUP message, the network starts timer T302 (the value of timer T302 is specified in 9.1), sends a SETUP ACKNOWLEDGE message to the user, and enters the overlap sending state. In case a), the network will return dial tone, if required by the tone option. In this case it may include progress indicator No. 8, *in-band information or appropriate pattern is now available* in the SETUP ACKNOWLEDGE message.

When the tone option applies, the network will return dial tone when the Bearer capability information element indicates an appropriate bearer capability, e.g. "3.1 kHz audio" or "speech". When the tone option is applied the user equipment shall attach to the B-channel on receipt of the SETUP ACKNOWLEDGE message.

NOTE 1 – Some networks which systematically provide the conventional telephone dial tone will not generate the progress indicator when providing the dial tone.

When the SETUP ACKNOWLEDGE message is received, the user enters the overlap sending state and optionally starts timer T304 (the value of timer T304 is specified in 9.2).

After receiving the SETUP ACKNOWLEDGE message, the user sends the remainder of the call information (if any) in one or more INFORMATION messages.

The called party number information may be provided by the user as follows:

- a) in the called party number information element; or
- b) in the keypad facility information element, exclusively.

The called party number must be sent in a unique way.

NOTE 2 – The support of a) is mandatory in all networks. Whether the support of b) is mandatory or optional requires further study. Telecom supports both a) and b).

On receiving the first INFORMATION message the network will remove dial tone if applied. Removal of dial tone shall not be accompanied by any Progress indicator information element.

NOTE 3 – Besides the possible called party number [conveyed by method a) or b) as described above], the INFORMATION messages may contain additional call information (i.e. for supplementary services). The interpretation of the contents of keypad facility information elements is network-specific, and in accordance with the dialling plan provided to that user. It should be noted that the user shall transfer all the additional call information (contained within the keypad facility information element) before the network determines that the called party number (contained within the called party number information element or the keypad facility information element) is complete, and terminates the overlap sending procedure using the CALL PROCEEDING message as recommended in 5.1.5.2.

If, for symmetry purposes, the user employs timer T304, the user restarts timer T304 when each INFORMATION message is sent.

The call information in the message which completes the information sending may contain a *sending complete* indication, (e.g. the # character or, as a network option, the sending complete information element) appropriate to the dialling plan being used. The network shall restart timer T302 on the receipt of every INFORMATION message not containing a sending complete indication.

5.1.4 Invalid call information

If, following the receipt of a SETUP message or during overlap sending, the network determines that the call information received from the user is invalid, (e.g. invalid number), then the network shall follow the procedures described in 5.3 with a cause such as one of the following:

- No. 1 – *Unassigned (unallocated) number;*
- No. 3 – *No route to destination;*
- No. 22 – *Number changed;*
- No. 28 – *Invalid number format (incomplete number).*

5.1.5 Call proceeding

5.1.5.1 Call proceeding, *en-bloc* sending

If *en-bloc* sending is used, (i.e. the network can determine that the SETUP message contains all the information required from the user to establish the call) and if the network can determine that access to the requested service is authorized and available, the network shall send a CALL PROCEEDING message to the user. This acknowledges the SETUP message, and indicates that the call is being processed. The network will then enter the Outgoing Call Proceeding state. When the user receives the CALL PROCEEDING message, the user shall also enter the Outgoing Call Proceeding state.

Similarly, if the network determines that a requested service is not authorized or is not available, the network shall initiate call clearing in accordance with 5.3, with one of the following causes:

- No. 57 – *Bearer capability not authorized;*
- No. 58 – *Bearer capability not presently available;*
- No. 63 – *Service or option not available, unspecified;* or
- No. 65 – *Bearer service not implemented.*

NOTES

- 1 If a supplementary service is not authorized or is not available, the procedure to be used is defined in the supplementary service control procedures.
- 2 When the network cannot assign a channel due to congestion, the procedures of 5.1.2 shall be followed.

5.1.5.2 Call proceeding, overlap sending

If overlap sending is used, then following the occurrence of one of these conditions:

- a) the receipt by the network of a sending complete indication which the network understands; or
- b) analysis by the network that all call information necessary to effect call establishment has been received, and if the network can determine that access to the requested service and supplementary service is authorized and available, the network shall: send a CALL PROCEEDING message to the user; stop timer T302; and enter the Outgoing Call Proceeding state. Similarly if the network determines that a requested service or supplementary service is not authorized or is not available, the network shall initiate call clearing in accordance with 5.3, with one of the following causes:

- No. 57 – *Bearer capability not authorized;*
- No. 58 – *Bearer capability not presently available;*
- No. 63 – *Service or option not available, unspecified;* or
- No. 65 – *Bearer service not implemented.*

NOTES

- 1 The CALL PROCEEDING message is sent to indicate that the requested call establishment has been initiated, and no more call establishment information will be accepted.
- 2 If a supplementary service is not authorized or is not available, the procedure to be used is defined in the supplementary service control procedures.
- 3 When the network cannot assign a channel due to congestion, the procedures of 5.1.2 shall be followed.

When the user receives the CALL PROCEEDING message, the user shall enter the outgoing call proceeding state. If, for symmetry purposes, the calling user employs timer T304, the user shall stop timer T304 when the CALL PROCEEDING message is received. If, for symmetry purposes, the calling user employs timer T304 then, on expiry of T304, the user shall initiate call clearing in accordance with 5.3 with cause No. 102, *recovery on time expiry*.

An alerting or connect indication received from the called party will stop timer T302 and cause an ALERTING or CONNECT message respectively to be sent to the calling user. No CALL PROCEEDING message shall be sent by the network. If, for symmetry purposes, the calling user employs timer T304, the user shall stop timer T304 on receiving the ALERTING or CONNECT message.

At the expiration of timer T302, the network shall

- i) initiate call clearing in accordance with 5.3, with cause No. 28, *invalid number format* (incomplete number) sent to the calling user and with cause No. 102, *recovery on timer expiry* is sent towards the called user, if the network determines that the call information is definitely incomplete; otherwise
- ii) send a CALL PROCEEDING message and enter the outgoing call proceeding state.

5.1.6 Notification of interworking at the originating interface

During call establishment, the call may leave the ISDN environment, e.g. because of interworking with another network, with a non-ISDN user, or with non-ISDN equipment within the called user's premises. When such situations occur a progress indication shall be returned to the calling user either:

- a) in an appropriate call control message when a state change is required: CALL PROCEEDING, ALERTING, SETUP ACKNOWLEDGE or CONNECT; or
- b) in the PROGRESS message when no state change is appropriate.

One of the following progress description values shall be included in the Progress indicator information element in the messages sent to the user, (for further information see Annex G).

- 1) No. 1 – *Call is not end-to-end ISDN; further call progress information may be available in-band;*
- 2) No. 2 – *Destination address is non-ISDN;*
- 3) No. 4 – *Call has returned to the ISDN.*

If the Progress indicator information element is included in a call control message, the procedures as described in the rest of 5.1 apply. If the Progress indicator information element is included in the Progress message, no state change will occur but any supervisory timers shall be stopped except network timer T302. In both cases, if indicated by the Progress indicator information element, the user shall connect to (if not connected already) and then monitor the B channel for further in-band information.

If the interface at which the progress indication originates is the point at which a call enters the ISDN environment from a non-ISDN environment, one or more of the following progress indicator information elements shall be included in the SETUP message sent to the network:

- i) No. 1 – *Call is not end-to-end ISDN; further call progress information may be available in-band;*
- ii) No. 3 – *Origination address is non-ISDN.*

5.1.7 Call confirmation indication

Upon receiving an indication that user alerting has been initiated at the called address, the network shall send an ALERTING message across the user-network interface of the calling address, and shall enter the call delivered state. When the user receives the ALERTING message, the user may begin an internally-generated alerting indication and shall enter the call delivered state.

In addition to the sending of the ALERTING message, the network will provide in-band ring-back tone to the calling user in the case where the Bearer capability information element indicates “3.1 kHz audio” or “speech”.

When the user equipment receives the ALERTING message, the user equipment shall:

- a) attach to the B-channel (if it has not already done so), provided the bearer capability is “3.1 kHz audio” or “speech”, and provided the equipment does not generate local tone: or,
- b) cause initiation of the user equipment generated alerting condition beginning an internally-generated alerting condition.

5.1.8 Call connected

Upon the network receiving an indication that the call has been accepted, the network shall send a CONNECT message across the user-network interface to the calling user, and shall enter the Active state. As a network option, the Date/time information element may be included in the CONNECT message.

This message indicates to the calling user that a connection has been established through the network and stops a possible local indication of alerting.

On receipt of the CONNECT message, the calling user shall stop any user-generated alerting indications; may optionally send a CONNECT ACKNOWLEDGE message, and shall enter the active state. The network shall not take any action on receipt of a CONNECT ACKNOWLEDGE message when it perceives the call to be in the active state.

5.1.9 Call rejection

Upon receiving an indication that the network or the called user is unable to accept the call, the network shall initiate call clearing at the originating user-network interface as described in 5.3, using the cause provided by the terminating network or the called user.

5.1.10 Transit network selection

When the transit network selection information element is present, the call shall be processed according to Annex C.

5.2 Call establishment at the destination interface

This procedure assumes that a data link connection providing services described in Recommendation Q.920/I.440 [45] may not exist before the first layer 3 message (SETUP) is transferred across the interface. However, reliable data link connections must be established by each of the users (terminals and/or NT2s) at the interface before they respond to the SETUP message.

Data link connections may be established by the TA, TE or NT2 as soon as a TEI is assigned (either locally or by automatic assignment procedure), and may be retained indefinitely. This may be recommended as a network option.

The SETUP message offered on a point-to-point data link shall be delivered to layer 2 using a DL-DATA request primitive. No use shall be made of the DL-UNIT-DATA request primitive other than for operation using the broadcast capability of the data link layer.

The call reference contained in all messages exchanged across the user-network interface shall contain the call reference value specified in the SETUP message delivered by the network. In selecting a call reference, the dummy call reference shall not be used in association with the basic call.

5.2.1 Incoming call

The network will indicate the arrival of a call at the user-network interface by transferring a SETUP message across the interface. This message is sent if the network can select an idle B-channel. In some circumstances (e.g. provision of other bearer services see 6.1) the SETUP message may also be sent when no B-channel is idle. The number of calls presented in these circumstances may be limited.

In addition to the mandatory information elements, the SETUP message may include, as required, the information elements described in 3.1.14 (e.g. Display, Low layer compatibility).

If a multipoint terminal configuration exists at the user-network interface, this message shall be sent using a broadcast capability at the data link layer. In this case, the SETUP message should contain the appropriate part of the called party number as required and/or sub-address if provided. However, if the network has knowledge that a single-point configuration exists at the interface, a point-to-point data link shall be used to carry the SETUP message. The knowledge that a point-to-point configuration exists may be based on information entered at the time of configuration of the access. After sending the SETUP message, the network starts timer T303. If the SETUP message is sent via a broadcast data link, timer T312 shall also be started. (The values of timers T303 and T312 are specified in 9.1.) The network then enters the call present state.

The knowledge that a single-point configuration exists is based on information entered at the time of configuration of the access.

NOTE 1 – Timer T312 is used to supervise the retention of the call reference when the SETUP message was transmitted by a broadcast data link. The value of timer T312 is such that if a network disconnect indication is received during the call establishment phase, it maximizes the probability that all responding users will be released prior to release of the call reference. Refer to 5.3.2 e) and 5.2.5.3 (Case 1) for procedures to be followed on expiry of timer T312.

If *en-bloc* receiving is used, the SETUP message shall contain all the information required by the called user to process the call. In this case, the SETUP message may contain the Sending complete information element.

Upon receipt of a SETUP message, the user will enter the Call present state.

Depending on the contents of the received message, either *en-bloc* receiving procedure (see 5.2.5.1) or overlap receiving procedure (see 5.2.4) follows. However, if the SETUP message includes the Sending complete information element, *en-bloc* receiving procedure shall follow. Therefore, those users who support overlap receiving procedure shall recognize the Sending complete information element.

NOTE 2 – Users supporting only the *en-bloc* receiving procedure need not recognize the Sending complete information element and may directly analyze the received SETUP message on the assumption that all the call information is contained in the message.

Telecom will not use overlap receiving procedures and will always include a Sending complete information element in the SETUP message sent to the user if the Called number information element is included. Therefore, user equipment need not support overlap receiving procedures.

If no response to the SETUP message is received by the network before the first expiry of timer T303, the SETUP message will be retransmitted and timers T303 and T312 restarted.

NOTE 3 – In the case of overlap sending within the network, the appropriate part of the called party number as required (e.g. for supplementary services) may also be conveyed by means of INFORMATION messages to the called user on a point-to-point data link (see 5.2.4).

5.2.2 Compatibility checking

A user receiving a SETUP message shall perform compatibility checking before responding to that SETUP message. Any reference to user in 5.2.3 through 5.2.7 implicitly refers to a compatible user equipment. Annex B defines compatibility checking to be performed by users upon receiving a SETUP message.

When the SETUP message is delivered via a broadcast data link, an incompatible user shall either:

- a) ignore the incoming call; or
- b) respond by sending a RELEASE COMPLETE message with cause No. 88, *incompatible destination*, and enter the Null state. The network processes this RELEASE COMPLETE message in accordance with 5.2.5.3.

When the SETUP message is delivered via a point-to-point data link, an incompatible user shall respond with RELEASE COMPLETE message with cause No. 88, *incompatible destination*, and enter the Null state. The network shall process this RELEASE COMPLETE message in accordance with 5.2.5.3.

5.2.3 B-channel selection – Destination

5.2.3.1 SETUP message delivered by point-to-point data link

When the SETUP message is delivered by a point-to-point data link, negotiation for the selection of a B-channel will be permitted between the network and the user. Only B-channels controlled by the same D-channel will be the subject of the selection procedure. The selection procedure is as follows:

- a) In the SETUP message, the network will indicate one of the following:
 - 1) channel is indicated, no acceptable alternative [i.e. channel is indicated by the information channel selection field of octet 3 (bits 2-1) and, if applicable, octet 3.3, and the preferred/exclusive field (bit 4 of octet 3) is set to “1” in the Channel identification information element]; or
 - 2) channel is indicated, any alternative is acceptable [i.e. channel is indicated by the information channel selection field of octet 3 (bits 2-1) and, if applicable, octet 3.3, and the preferred/exclusive field (bit 4 of octet 3) is set to “0” in the Channel identification information element]; or
 - 3) any channel is acceptable [i.e. either the information channel selection field of octet 3 (bits 2-1) of the Channel identification information element indicate “any channel” or the Channel identification information element is not present]; or
 - 4) no B-channel available [i.e. the information channel field (Bits 2 and 1 of octet 3) of the Channel identification information element set to “00”].

NOTE – Not all networks will support the *no B-channel available* condition.

- b) In cases 1) and 2), if the indicated channel is acceptable and available, the user selects it for the call.
In case 2), if the user cannot grant the indicated channel, it selects any other available Bchannel associated with the D-channel, and identifies that channel in the Channel identification information element as “channel is indicated, no acceptable alternative” in the first message sent in response to the SETUP message.

In case 3), the user selects any available B-channel associated with the D-channel, and identifies that channel in the first message sent in response to the SETUP message.

If in case 1) the B-channel indicated in the first response message is not the channel offered by the network, or in cases 2) and 3) the B-channel indicated in the first response message is unacceptable to the network, it will clear the call by sending a RELEASE message with cause No. 6, *channel unacceptable*.

In case 4), the user rejects the call by sending RELEASE COMPLETE message with cause No.34 *no circuit/Bhannel available* unless it is able to proceed with the call. Unless the procedures of the Call Waiting supplementary service (see Recommendation Q.953 [84]) are followed, the user wishing to re-use a B-channel it has already allocated to another call (e.g. by multiplexing packet calls) shall send the appropriate message containing the channel identification information element, coded as *channel is indicated, no alternative acceptable*.

- c) If no Channel identification information element is present in the first response message, the B-channel indicated in the SETUP message will be assumed.
- d) When a B-channel has been selected by the user, that channel may be connected by the user.
- e) In case 1) if the indicated B-channel is not available, or in cases 2), 3), and 4) if no B-channel is available and the user cannot proceed with the offered call, the user returns a RELEASE COMPLETE message with cause No. 44 *requested circuit/Bhannel not available* or No. 34 *no circuit/Bhannel available*, respectively, and returns to the Null state.

See 5.2.4 and 5.2.5 for the appropriate first response to the SETUP message.

5.2.3.2 SETUP message delivered by broadcast data link

When the SETUP message is delivered by a broadcast data link the channel selection procedure, provided in 5.2.3.1, is not applicable. The network sends a SETUP message with the Channel identification information element indicating one of the following:

- a) channel indicated, no alternative is acceptable [i.e. channel is indicated by the information channel selection field of octet 3 (bits 2-1) and, if applicable, octet 3.3, and the preferred/exclusive field (bit 4 of octet 3) is set to “1” in the Channel identification information element]; or
- b) no channel available [i.e. the information channel field (bits 2 and 1 of octet 3) of the Channel identification information element set to “00”].

The network starts timers T303 and T312.

In case a), if the user can accept the call on the indicated channel, the user shall send the appropriate message (see 5.2.4 and 5.2.5). If the user cannot accept the call on the indicated channel, the user shall send a RELEASE COMPLETE message with cause No. 44, *requested circuit/Bchannel not available*.

The user, in any case, must not connect to the channel until a CONNECT ACKNOWLEDGE message has been received. In case b), the user not controlling any channel shall send a RELEASE COMPLETE message with cause No. 34, *no circuit/Bchannel available*. Unless the procedures of the Call Waiting supplementary service (see Recommendation Q.953 [84]) are followed, the user wishing to re-use a B-channel it has already allocated to another call (e.g. by multiplexing packet calls) shall send the appropriate message containing the Channel identification information element, coded as *channel is indicated, no alternative acceptable*.

5.2.4 Overlap receiving

Overlap receiving procedures are not supported by Telecom's network. On receipt of a SETUP ACKNOWLEDGE message the network will send a STATUS message with cause 91 and state 6.

When a user determines that a received SETUP message contains either:

- a) no called number information; or
- b) incomplete called number information; or
- c) called number information which the user cannot determine to be complete; and

when the user

- d) is compatible with other call characteristics (see Annex B); and
- e) implements overlap receiving;

the user shall start timer T302; send a SETUP ACKNOWLEDGE message to the network; and enter the Overlap receiving state.

When the SETUP ACKNOWLEDGE message is received, the network shall: stop timer T303; start timer T304; enter the Overlap receiving state; and send the remainder of the call information (if any) in one or more INFORMATION messages, starting timer T304 when each INFORMATION message is sent.

The called party number information is provided in the Called party number information element.

The call address information may contain a *sending complete* indication (e.g. No. or, as a network option, the Sending complete information element) appropriate to the dialling plan being used.

NOTE 1 – If the network can determine that sufficient call set-up information will be received by the called user by sending the next INFORMATION message, it is recommended that the INFORMATION message contains the Sending complete information element.

The user shall start timer T302 on receipt of every INFORMATION message not containing a sending complete indication.

Following the receipt of a sending complete indication which the user understands, or the determination that sufficient call information has been received, the user shall stop timer T302 (if implemented) and send a CALL PROCEEDING message to the network. Alternatively, depending on internal events, the user may send an ALERTING or a CONNECT message to the network.

NOTE 2 – The CALL PROCEEDING message in this case will cause the originating exchange to send a CALL PROCEEDING message to the originating user, if not already sent.

At the expiration of timer T302 the user shall

- a) initiate clearing in accordance with 5.3, with cause No. 28, *invalid number format (incomplete number)* if it determines that the call information is definitely incomplete; or
- b) if sufficient information has been received, send a CALL PROCEEDING, ALERTING or CONNECT message as appropriate.

At the expiration of timer T304 the network initiates call clearing in accordance with 5.3, with cause No. 28, *invalid number format (incomplete number)* sent to the calling user, and cause No. 102, *recovery on timer expiry* sent to the called user.

If, following the receipt of a SETUP message or during overlap receiving, the user determines that the received call information is invalid (e.g. invalid called party number), it shall initiate call clearing in accordance with 5.3 with a cause such as one of the following:

- No. 1 – *Unassigned (unallocated) number*;
- No. 3 – *No route to destination*;
- No. 22 – *Number changed*;
- No. 28 – *Invalid number format (incomplete number)*.

Upon receipt of the complete call information the user may further perform some compatibility checking functions, as outlined in Annex B.

When the call is offered on a point-to-point data link, only one SETUP ACKNOWLEDGE message can be received in response to the call offering.

When the call is offered to the user on a broadcast data link, multiple SETUP ACKNOWLEDGE messages may be received by the network which shall then complete as many overlap receiving procedures as such SETUP ACKNOWLEDGE messages were received. It is the network responsibility to limit the number of overlap receiving procedures to be completed for a given call. The default maximum is fixed to eight. Some networks will limit the call offering completion in overlap receiving to single data link and will therefore clear the subsequent responding users after the first SETUP ACKNOWLEDGE message has been received, in accordance with the non-selected user clearing procedures described in 5.2.9.

5.2.5 Call confirmation

5.2.5.1 Response to *en-block* SETUP or completion of overlap receiving

When the user determines that sufficient call set-up information has been received and compatibility requirements (see Annex B) have been satisfied, the user responds with either a CALL PROCEEDING, ALERTING, or CONNECT message (see Note), and enters the Incoming Call Proceeding, Call Received, or Connect Request state respectively.

NOTE – A Progress indicator information element may be included in CALL PROCEEDING, ALERTING and CONNECT messages (e.g. when an analogue terminal is connected to an ISDN PABX). The CALL PROCEEDING message may be sent by the user which cannot respond to a SETUP message with an ALERTING, CONNECT, or RELEASE COMPLETE message before expiration of timer T303.

When the SETUP message was delivered via a broadcast data link, an incompatible user shall either

- a) ignore the incoming call; or
- b) respond by sending a RELEASE COMPLETE message with cause No. 88, *incompatible destination*, and enter the Null state. The network processes this RELEASE COMPLETE message in accordance with 5.2.5.3.

When the SETUP message was delivered via a point-to-point data link, an incompatible user shall respond with a RELEASE COMPLETE message with cause No. 88, *incompatible destination*. The network processes this RELEASE COMPLETE message in accordance with 5.2.5.3.

A busy user which satisfies the compatibility requirements indicated in the SETUP message shall normally respond with a RELEASE COMPLETE message with cause No. 17, *user busy*. The network processes this RELEASE COMPLETE message in accordance with 5.2.5.3.

If the user wishes to refuse the call, a RELEASE COMPLETE message shall be sent with the cause No. 21, *call rejected*, and the user returns to the Null state. The network processes this RELEASE COMPLETE message in accordance with 5.2.5.3.

5.2.5.2 Receipt of CALL PROCEEDING and ALERTING

When the SETUP message is delivered on a broadcast data link, the network shall maintain a state machine that tracks the overall progression of the incoming call. The network shall also maintain an associated call state for each responding user as determined by the data link on which a message is received.

Upon receipt of the first CALL PROCEEDING message from a user (assuming no other user had previously responded with an ALERTING or CONNECT message when the SETUP message has been delivered on a broadcast data link), the network shall stop timer T303 (or, in the case of overlap receiving, timer T304 for that user); start timer T310, and enter the incoming call proceeding state.

When the SETUP message has been delivered on a broadcast data link, the network shall (at a minimum) associate the incoming call proceeding state with each called user that sends a CALL PROCEEDING message as a first response to the broadcast SETUP message prior to expiration of timer T312. Actions to be taken when a user sends a first response to an incoming call after the expiration of timer T312 are described in 5.2.5.4. Timer T310 shall not be restarted.

Upon receipt of the first ALERTING message from a user (assuming no other user has previously responded with a CONNECT message when the SETUP message has been delivered on a broadcast data link), the network shall stop timer T304 for that user (in the case of overlap receiving); stop timer T303 or T310 (if running); start timer T301 (unless another internal alerting supervision timer function exists, e.g. incorporated in call control); enter the call received state, and send a corresponding ALERTING message to the calling user.

When the SETUP message has been delivered on a broadcast data link, the network shall (at a minimum) associate the call received state with each called user that sends an ALERTING message either as a first response to the broadcast SETUP message or following a CALL PROCEEDING message. Timer T304 shall not be restarted.

5.2.5.3 Called user clearing during incoming call establishment

If the SETUP message has been delivered on a point-to-point data link and a RELEASE COMPLETE or DISCONNECT message is received before a CONNECT message has been received, the network shall stop timer T303, T304, T310 or T301 (if running); continue to clear the user as described in 5.3.3, and clear the call to the calling user with the cause received in the RELEASE COMPLETE or DISCONNECT message.

If the SETUP message has been delivered on a broadcast data link and a RELEASE COMPLETE message is received whilst timer T303 is running, the message cause shall be retained by the network. If timer T303 expires (i.e. if no valid message such as CALL PROCEEDING, ALERTING or CONNECT has been received) the cause previously retained when a RELEASE COMPLETE message was received is sent back to the calling user in a DISCONNECT message and the network shall enter the Call Abort state. When multiple RELEASE COMPLETE messages are received with different causes, the network shall

- 1) ignore any cause No. 88, *incompatible destination*; and
- 2) give preference to the following causes (if received) in the order listed below:
 - (highest) No. 17 *user busy*;
 - No. 21 *call rejected*;
- 3) any other received cause may also be included in the clearing message sent to the originating user (see 5.3).

If the SETUP message has been delivered on a broadcast data link and a user which has previously sent a SETUP ACKNOWLEDGE, CALL PROCEEDING or ALERTING message sends a DISCONNECT message to the network, the actions taken by the network depend on whether timer T312 is running and whether other called users have responded to the SETUP message.

Case 1 – DISCONNECT received prior to expiry of timer T312

If timer T312 is running and the network receives a DISCONNECT message after having received a SETUP ACKNOWLEDGE, CALL PROCEEDING or ALERTING message from a called user (but before receiving a CONNECT message), timer T312, as well as timer T310 or T301 (if running), should continue to run. The network shall retain the cause in the DISCONNECT message and shall continue to clear the user as described in 5.3.3. The network shall stop timer T304 (if running) for this user.

Upon expiration of timer T312, if either

- a) no other users have responded to the incoming call; or
- b) all users that have responded to the incoming call have been cleared or are in the process of being cleared,

the network shall stop timer T310 or T301 (if running) and shall clear the call to the calling user. If an ALERTING message has been received, the cause sent to the calling user shall be a cause received from the called user, giving preference to (in order of priority): No. 21, *call rejected*; any other cause sent by a called user. If only SETUP ACKNOWLEDGE, or CALL PROCEEDING messages have been received, the cause sent to the calling user shall be a cause received from the called user, giving preference to (in order of priority): No. 17, *user busy*; No. 21, *call rejected*; any other appropriate cause sent by a called user.

Case 2 – DISCONNECT received after expiry of timer T312

If timer T312 has expired and the network receives a DISCONNECT message from the called user after having received a SETUP ACKNOWLEDGE, CALL PROCEEDING or ALERTING message (but before receiving a CONNECT message), the network shall continue to clear the user as described in 5.3.3. The network shall stop timer T304 (if running) for this user.

If other called users have responded to the SETUP message with a SETUP ACKNOWLEDGE, CALL PROCEEDING or ALERTING message, and still have the opportunity to accept the call by sending a CONNECT message, the network shall retain the cause in the DISCONNECT message. The network shall continue to process the incoming call for the remaining responding users (T310 or T301, if running, shall continue to run).

If either

- a) no other users have responded to the incoming call; or
- b) all users that have responded to the incoming call have been cleared or are in the process of being cleared,

the network shall stop timer T310 or T301 (if running) and shall clear the call to the calling user. If an ALERTING message has been received, the cause sent to the calling user shall be a cause received from the called user, giving preference to (in order of priority): No. 21, *call rejected*; or any other cause sent by a called user. If only SETUP ACKNOWLEDGE, or CALL PROCEEDING message have been received, the cause sent to the calling user shall be a cause received from the called user, giving preference to (in order of priority): No. 17, *user busy*; No. 21, *call rejected*; any other appropriate cause sent by a called user.

5.2.5.4 Call failure

If the network does not receive any response to the retransmitted SETUP message prior to the expiration of timer T303, then the network shall initiate clearing procedures towards the calling user with cause No. 18, *no user responding*.

- a) If the SETUP message was delivered by a broadcast data link, the network shall enter the Call Abort state.
- b) If the SETUP message was delivered on a point-to-point data link, the network shall also initiate clearing procedures towards the called user in accordance with 5.3.4, using cause No. 102, *recovery on timer expiry*.

If the network receives a user's first response to SETUP when in the Call Abort state but before timer T312 has expired, the network shall initiate clearing to the called user as described in 5.3.2 b), except that the cause No. 102, *recovery on timer expiry* shall be sent. If the network receives a message that is a user's first response to an incoming call after timer T312 has expired, the network will interpret this message as a message received with an invalid call reference value, as described in 5.8.3.2.

If the network has received a CALL PROCEEDING message, but does not receive an ALERTING, CONNECT, or DISCONNECT message prior to the expiration of timer T310, then the network shall initiate clearing procedures towards the calling user with cause No. 18, *no user responding* and initiate clearing procedures towards the called user.

- 1) If the SETUP message is delivered by a broadcast data link, the called user shall be cleared in accordance with 5.3.2 e), except that cause No. 102, *recovery on timer expiry* shall be sent.
- 2) If the SETUP message was delivered on a point-to-point data link, the called user shall be cleared in accordance with 5.3.4 using cause No. 102, *recovery on timer expiry*.

If the network has received an ALERTING message, but does not receive a CONNECT or DISCONNECT message prior to the expiry of timer T301 (or a corresponding internal alerting supervision timing function), then the network shall initiate clearing procedures towards the calling user with cause No. 19, *user alerting, no answer*; and initiate clearing procedures towards the called user.

- i) If the SETUP message was delivered by a broadcast data link, the called user shall be cleared in accordance with 5.3.2 e), except that cause No. 102, *recovery on timer expiry* shall be sent.
- ii) If the SETUP message was delivered on a point-to-point data link, the called user shall be cleared in accordance with 5.3.4, using cause No. 102, *recovery on timer expiry*.

5.2.6 Notification of interworking at the terminating interface

During call establishment the call may enter an ISDN environment, e.g. because of interworking with another network, with a non-ISDN user, or with non-ISDN equipment within the calling or called user's premises. When this occurs, the point at which the call enters an ISDN environment shall cause a Progress indicator information element to be included in the SETUP message to be sent to the called user:

- a) *No. 1 "call is not end-to-end ISDN; further call progress information may be available in-band"*;

NOTE – On receipt of progress indicator No. 1, the called user shall connect to the B-channel in accordance with the procedures of 5.2.8.

- b) *No. 3 "origination address is non-ISDN"*.

In addition, the user shall notify the calling party if the call has left the ISDN environment within the called user's premises, or upon the availability of in-band information/patterns. When such situations occur, a progress indication shall be sent by the user to the network either

- a) in an appropriate call control message when a state change is required (SETUP ACKNOWLEDGE, CALL PROCEEDING, ALERTING, or CONNECT); or
- b) in the PROGRESS message when no state change is appropriate.

One of the following progress description values shall be included in the Progress indicator information element in the message sent to the network (for further information, see Annex G):

- i) *No. 1 – Call is not end-to-end ISDN; further call progress information may be available in-band;*
- ii) *No. 2 – Destination address is non-ISDN;*
- iii) *No. 4 – Call has returned to the ISDN.*

If the progress indicator information element is included in a call control message, the procedures as described in the rest of 5.2 apply. If the progress indicator information element is included in the PROGRESS message, no state change will occur but any supervisory timers shall be stopped except network timers T304 and T312.

5.2.7 Call accept

A user indicates acceptance of an incoming call by sending a CONNECT message to the network. Upon sending the CONNECT message the user shall start timer T313 (specified in 9.2). If an ALERTING message had previously been sent to the network, the CONNECT message may contain only the call reference.

If a call can be accepted using the B-channel indicated in the SETUP message, and no user alerting is required, a CONNECT message may be sent without a previous ALERTING message.

5.2.8 Active indication

On receipt of the first CONNECT message, the network shall stop (if running) timers T301, T303, T304 and T310; complete the circuit-switched path to the selected B-channel; send a CONNECT ACKNOWLEDGE message to the user which first accepted the call; initiate procedures to send a CONNECT message towards the calling user, and enter the active state.

The CONNECT ACKNOWLEDGE message indicates completion of the circuit-switched connection. There is no guarantee of an end-to-end connection until a CONNECT message is received at the calling user. Upon receipt of the CONNECT ACKNOWLEDGE message the user shall stop timer T313 and enter the active state.

When timer T313 expires prior to receipt of a CONNECT ACKNOWLEDGE message, the user shall initiate clearing in accordance with 5.3.3.

A user which has received the SETUP via the broadcast data link, and has been awarded the call, shall connect to the B-channel only after it has received the CONNECT ACKNOWLEDGE message. Only the user that is awarded the call will receive the CONNECT ACKNOWLEDGE message.

A user which has received the SETUP via a point-to-point data link may connect to the B-channel as soon as channel selection has been completed.

5.2.9 Non-selected user clearing

In addition to sending the CONNECT ACKNOWLEDGE message to the user selected for the call, the network shall send RELEASE message [as described in 5.3.2 b)] to all other users at the interface that have sent SETUP ACKNOWLEDGE, CALL PROCEEDING, ALERTING or CONNECT messages in response to the SETUP message. These RELEASE messages are used to notify the users that the call is no longer offered to them. The procedures described in 5.3.4 are then followed. Any user which having previously sent a CONNECT message and started timer T313, and which subsequently receives a RELEASE message, shall stop timer T313 and follow the procedures of 5.3.4.

5.3 Call clearing

5.3.1 Terminology

The following terms are used in this Specification in the description of clearing procedures:

- A channel is *connected* when the channel is part of a circuit-switched ISDN connection established according to this Specification.
- A channel is *disconnected* when the channel is no longer part of a circuit-switched ISDN connection, but is not yet available for use in a new connection.
- A channel is *released* when the channel is not part of a circuit-switched ISDN connection and is available for use in a new connection. Similarly, a call reference that is *released* is available for reuse.

5.3.2 Exception conditions

Under normal conditions, call clearing is usually initiated when the user or the network sends a DISCONNECT message and follows the procedures defined in 5.3.3 and 5.3.4 respectively. The only exceptions to the above rule are as follows:

- a) In response to a SETUP message, the user or network can reject a call (e.g. because of the unavailability of a suitable B-channel) by responding with a RELEASE COMPLETE message provided no other response has previously been sent (e.g. the SETUP ACKNOWLEDGE message in the case of overlap sending); releasing the call reference, and enter the Null state.
- b) In the case of a multipoint terminal configuration, non-selected user call clearing will be initiated with RELEASE message(s) from the network (see 5.2.9). The RELEASE message shall contain cause No. 26, *non-selected user clearing*.
- c) Clearing of temporary signalling connections will be initiated by sending a RELEASE message as described in 5.3.3 and 5.3.4.
- d) Unsuccessful termination of the B-channel selection procedure (see 5.2.3.1 and 5.1.2) by the side offering the call is accomplished by sending a RELEASE message. The RELEASE message shall contain cause No. 6, *channel unacceptable*. The network and user shall subsequently follow the procedures of 5.3.3 and 5.3.4.

- e) 1) In the case of a SETUP message sent via the broadcast data link, if a network disconnect indication is received during call establishment, and prior to the expiry of timer T312, timer T303 is stopped (if running) and the network enters the Call Abort state. Any user which has responded, or subsequently responds before timer T312 expires, will be cleared by a RELEASE message (with the cause code(s) contained in the network disconnect indication) and the procedures of 5.3.4 are then followed for that user. Upon expiry of timer T312, the network shall treat any subsequent responses according to the procedures defined in 5.8.3.2. The network shall enter the Null state upon completion of clearing procedures for all responding users.
- 2) In the case of a SETUP message sent via the broadcast data link, if a network disconnect indication is received during call establishment after expiry of timer T312, any user which has responded shall be cleared by a RELEASE message (with the cause code(s) contained in the network disconnect indication) and the procedures of 5.3.4 are then followed for that user. The network enters the Null state upon completion of clearing procedures for all responding users.

NOTE – A separate state machine exists for each responding user.

- f) When timer T318 expires, the user initiates call clearing by sending a RELEASE message with cause No. 102 “recovery on timer expiry”; starting timer T308, and continuing as described in 5.3.3.

5.3.3 Clearing initiated by the user

Apart from the exceptions identified in 5.3.2 and 5.8, the user shall initiate clearing by sending a DISCONNECT message; starting timer T305 (the value of timer T305 is specified in 9.2); disconnecting the B-channel, and entering the disconnect request state.

NOTE 1 – When a user initiates call clearing by sending a RELEASE message, the procedures described in 5.3.4 are then followed.

The network shall enter the Disconnect Request state upon receipt of a DISCONNECT message. This message then prompts the network to disconnect the B-channel, and to initiate procedures for clearing the network connection to the remote user. Once the B-channel used for the call has been disconnected, the network shall send a RELEASE message to the user; start timer T308 (the value of a timer T.308 is specified in 9.1), and enter the Release Request state.

NOTE 2 – The RELEASE message has only local significance and does not imply an acknowledgement of clearing from the remote user.

On receipt of the RELEASE message the user shall cancel timer T305; release the B-channel; send a RELEASE COMPLETE message; release the call reference; and return to the Null state. Following the receipt of a RELEASE COMPLETE message from the user, the network shall stop timer T308; release both the B-channel and the call reference, and return to the Null state.

If timer T305 expires, the user shall send a RELEASE message to the network with the cause number originally contained in the DISCONNECT message; start timer T308 and enter the Release Request state. In addition, the user may indicate a second Cause information element with cause No. 102, *recovery on timer expiry*.

If timer T308 expires for the first time, the network shall retransmit the RELEASE message and timer T308 shall be restarted. In addition, the network may indicate a second Cause information element with cause No. 102, *recovery on timer expiry*. If no RELEASE COMPLETE message is received from the user before timer T308 expires a second time, the network shall place the B-channel in a maintenance condition, release the call reference, and return to the Null state.

NOTE 3 – The restart procedures contained in 5.5 may be used on B-channels in the maintenance condition.

NOTE 4 – Other actions which could be taken by the network upon receipt of a DISCONNECT message are for further study.

The actions to be taken with regard to the maintenance condition are network dependent.

5.3.4 Clearing initiated by the network

Apart from the exception conditions identified in 5.3.2 and 5.8, the network shall initiate clearing by sending a DISCONNECT message, and entering the Disconnect Indication state. The DISCONNECT message is a local invitation to clear and does not imply that the B-channel has been disconnected at the user-network interface.

NOTE – When the network initiates clearing by sending a RELEASE message, the procedures described in 5.3.3 are followed.

5.3.4.1 Clearing when tones/announcements provided

When in-band tones/announcements are provided (see 5.4), the DISCONNECT message contains progress indicator No. 8, *in-band information or appropriate pattern now available*. The network shall: start timer T306; and enter the Disconnect Indication state.

On receipt of the DISCONNECT message with progress indicator No. 8, the user may connect (if not already connected) to the B-channel to receive the in-band tone/announcement; and enter the disconnect indication state. Alternatively, to continue clearing without connecting to the in-band tone/announcement, the user shall disconnect the B-channel; send a RELEASE message, start timer T308, and enter the Release Request state.

If the user connects to the provided in-band tone/announcement, the user may subsequently continue clearing (before the receipt of a RELEASE from the network) by disconnecting from the B-channel; sending a RELEASE message; starting timer T308; and entering the Release Request state.

On receipt of the RELEASE message, the network shall stop timer T306; disconnect and release the B-channel; send a RELEASE COMPLETE message; release the call reference, and return to the Null state.

If timer T306 expires, the network shall continue clearing by disconnecting the B-channel; sending a RELEASE message with the cause number originally contained in the DISCONNECT message; starting timer T308, and entering the Release Request state.

In addition to the original clearing cause, the RELEASE message may contain a second cause information element with cause No. 102, *recovery on timer expiry*; this cause may optionally contain a diagnostic field identifying the timer that expired.

On receipt of the RELEASE message, the user shall act according to 5.3.3.

5.3.4.2 Clearing when tones/announcements not provided

When in-band tones/announcements are *not* provided, the DISCONNECT message does *not* contain progress indicator No. 8 *in-band information or appropriate pattern now available*. The network shall initiate clearing by sending the DISCONNECT message; start timer T305; disconnects the B-channel, and enters the Disconnect Indication state.

On the receipt of the DISCONNECT message without progress indicator No. 8, the user shall disconnect the B-channel; send a RELEASE message; start timer T308, and enter the Release Request state.

On receipt of the RELEASE message, the network shall stop timer T305; release the B-channel; send a RELEASE COMPLETE message; release the call reference, and return to the Null state.

If timer T305 expires, the network shall send a RELEASE message to the user with the cause number originally contained in the DISCONNECT message; start timer T308, and enter the Release Request state. In addition to the original clearing cause, the RELEASE message may contain a second Cause information element with cause No. 102, *recovery on timer expiry*.

5.3.4.3 Completion of clearing

Following the receipt of a RELEASE COMPLETE message from the network, the user shall stop timer T308; release both the B-channel and the call reference, and return to the Null state.

If a RELEASE COMPLETE is not received by the user before the first expiry of timer T308, the RELEASE message shall be retransmitted and timer T308 shall be restarted. If no RELEASE COMPLETE message is received from the network before timer T308 expires a second time, the user may place the B-channel in a maintenance condition; shall release the call reference, and return to the Null state.

NOTE – The restart procedures contained in 5.5 may be used on B-channels in the maintenance condition.

The option of placing the B-channel in the maintenance condition is not applicable in the case of point-to-multipoint configurations.

5.3.5 Clear collision

Clear collision occurs when the user and the network simultaneously transfer DISCONNECT messages specifying the same call reference value. When the network receives a DISCONNECT message whilst in the Disconnect Indication state, the network shall stop timer T305 or T306 (whichever is running); disconnect the B-channel (if not disconnected); send a RELEASE message; start timer T308, and enter the Release Request state. Similarly, when the user receives a DISCONNECT message whilst in the Disconnect Request state, the user shall stop timer T305; send a RELEASE message; start timer T308, and enter the Release Request state.

Clear collision can also occur when both sides simultaneously transfer RELEASE messages related to the same call reference value. The entity receiving such a RELEASE message whilst within the Release Request state shall stop timer T308; release the call reference and B-channel, and enter the Null state (without sending or receiving a RELEASE COMPLETE message).

5.4 In-band tones and announcements

When in-band tones/announcements not associated with a call state change are to be provided by the network before reaching the Active state, a PROGRESS message is returned simultaneously with the application of the in-band tone/announcement. The PROGRESS message contains the progress indicator No. 8, *in-band information or appropriate pattern is now available*.

When tones/announcements have to be provided together with a call state change, then the appropriate message [e.g. for ALERTING, DISCONNECT, etc., (see appropriate section)] with progress indicator No. 8, *in-band information or appropriate pattern is now available* is sent simultaneously with the application of the in-band tone/announcement.

NOTES

1 When the network provides CCITT standardized telecommunications services, the service requirement for provision of in-band tones/announcements is as indicated in the I.200-Series Recommendations.

2 When the PROGRESS message is used, the user may initiate call clearing as a result of the applied in-band tone/announcement, according to the procedures specified in 5.3.3.

3 The protocol currently described in 5.4 applies at the calling user-network interface. The protocol to be applied at the internetwork interface and at the called user-network interface requires further study.

5.5 Restart procedure

The restart procedure is used to return calls to the Null state or the interface to an idle condition. The procedure is usually invoked when the other side of the interface does not respond to other call control messages or a failure has occurred (e.g. following a data link failure, when a backup D-channel can be used, or following the expiry of timer T308 due to the absence of response to a clearing message). It may also be initiated as a result of local failure, maintenance action or mis-operation.

NOTES

1 Layer 3 procedures and resources associated with those data links with SAPI = "0000 000" should be initialized by the restart procedures.

2 The call reference flag of the global call reference applies to restart procedures. In the case when both sides of the interface initiate simultaneous restart requests, they shall be handled independently. In the case when the same channel(s) or interface(s) are specified, they shall not be considered free for reuse until all the relevant restart procedures are completed.

When

- a) both the user and the network are aware of the configuration of the interface; and,
- b) the interface is a basic access (Recommendation I.431 [27]) where a point-to-point configuration exists; or
- c) the interface is a primary rate access (Recommendation I.430 [46]);

then the user and the network shall implement the procedures of 5.5. In all other cases, the procedures of 5.5 are optional.

5.5.1 Sending RESTART message

A RESTART message is sent by the network or user equipment in order to return channels or interfaces to the Null state. The Restart indicator information element shall be present in the RESTART message to indicate whether an *Indicated channel*, *Single interface* or *All interfaces* are to be restarted. If the Restart indicator information element is coded as "Indicated channel", or "Single interface" and the interface is one other than the one containing the D-channel, then the Channel identification information element shall be present to indicate which channel or interface is to be returned to the idle condition. If the Restart indicator information element is coded as "Single interface" and the interface is the one containing the D-channel, then the Channel identification information element may be omitted. If the Restart indicator information element is coded as "All interfaces" then the Channel identification information element shall not be included.

Upon transmitting the RESTART message the sender enters the Restart Request state, starts timer T316, and waits for a RESTART ACKNOWLEDGE message. Also, no further RESTART messages shall be sent until a RESTART ACKNOWLEDGE is received or timer T316 expires. Receipt of a RESTART ACKNOWLEDGE message stops timer T316, frees the channels and call reference values for reuse, and enters the Null state.

If a RESTART ACKNOWLEDGE message is not received prior to the expiry of timer T316 one or more subsequent RESTART messages may be sent until a RESTART ACKNOWLEDGE message is returned. Meanwhile, no calls shall be placed or accepted over the channel or interface by the originator of the RESTART message. A network shall limit the number of consecutive unsuccessful restart attempts to a default limit of two. When this limit is reached, the network shall make no further restart attempts. An indication will be provided to the appropriate maintenance entity. The channel or interface is considered to be in an out-of-service condition until maintenance action has been taken.

NOTE – If a RESTART ACKNOWLEDGE message is received indicating only a subset of the specified channels, an indication shall be given to the maintenance entity. It is the responsibility of the maintenance entity to determine what actions shall be taken on the channel(s) which have not been returned to the idle condition.

The RESTART and RESTART ACKNOWLEDGE message shall contain the global call reference value (all zeros) to which the Restart Request state is associated. These messages are transferred via the appropriate point-to-point data link in the multiple frame mode using the DL-DATA request primitive.

5.5.2 Receipt of RESTART message

Upon receiving a RESTART message the recipient shall enter the Restart state associated to the global call reference and start timer T317; it shall then initiate the appropriate internal actions to return the specified channels to the idle condition and call references to the Null state. Upon completion of internal clearing, timer T317 shall be stopped and a RESTART ACKNOWLEDGE message transmitted to the originator, and the Null state entered.

NOTE 1 – If only a subset of the specified channels have been returned to the idle condition when timer T317 expires, a RESTART ACKNOWLEDGE message should be transmitted to the originator, containing a Channel identification information element indicating the channel(s) that have been returned to the idle condition.

If timer T317 expires prior to completion of internal clearing an indication shall be sent to the maintenance entity (i.e. a primitive should be transmitted to the system management entity).

NOTE 2 – Even if all call references are in the Null state, and all channels are in the idle condition, the receiving entity shall transmit a RESTART ACKNOWLEDGE message to the originator upon receiving a RESTART message.

If the Restart indicator information element is coded as “all interfaces” then all calls on all interfaces associated with the D-channel shall be cleared. If the Restart indicator information element is coded as “all interfaces” and a Channel identification information element is included, the Channel identification information element is treated as described in 5.8.7.3.

If the Restart indicator information element is coded as “indicated channel” and the Channel indication information element is not included, then the procedures in 5.8.6.1 shall be followed.

If the Restart indicator information element is coded as “single interface” and that interface includes the D-channel then only those calls associated with the D-channel on that interface shall be cleared.

The receiving DSS1 protocol control entity for the global call reference shall indicate a restart request to only those DSS1 protocol control entities for specific call references which

- a) are supported by the same Data Link Connection Endpoint Identifier (DLCI) (see Recommendation Q.920) as the DSS1 protocol control entity for the global call reference which received the RESTART message; and
- b) correspond to the specified channel(s) or interface(s), or (if the D-channel was implicitly specified) are not associated with any channel, including calls in the call establishment phase for which a channel has not yet been allocated.

The following entities shall be released:

- a) B and H channels established by Q.931 messages including channels used for packet access (case B) (consequently all virtual calls carried in the released channel(s) will be handled as described in 6.4.1);
- b) user signalling bearer service connections.
- c) other resources associated with a call reference, where specified in other DSS1 Recommendations.

NOTE 3 – Application to the Register procedures in Recommendation Q.932 requires further study.

The following entities shall not be released:

- a) semi-permanent connections that are established by man-machine commands;
- b) calls associated with DSS1 protocol control entities supported by any DLCI other than one supporting the DSS1 protocol entity for the global call reference which received the RESTART message;
- c) X.25 virtual calls and permanent virtual circuits using SAPI = 16;
- d) TID and USID values established using terminal initialization procedures (see Annex A/Q.932).

If semi-permanent connections established by man-machine command are implicitly specified (by specifying “single interface or “all interfaces”), no action shall be taken on these channels, but a RESTART ACKNOWLEDGE message shall be returned containing the appropriate indications (i.e. “single interface” or “all interfaces”).

If semi-permanent connections established by man-machine command are explicitly specified (by including a Channel identification information element in the RESTART message) no action shall be taken on these channels, and a STATUS message should be returned with cause No. 82, “*Identified channel does not exist*” optionally indicating in the diagnostic field the channel(s) that could not be handled.

5.6 Call rearrangements

The elements of procedure in this subclause provide for physical layer and/or data link layer rearrangements after a call has entered the Active state as defined in 2.2.1.5. The procedure is restricted to use on the same interface structure, and resumption on the same B-channel. The use of call rearrangement procedure is restricted to basic access, i.e. it will not be available for primary rate access. For call rearrangements controlled by an NT2, see 5.6.7.

The activation of this procedure at a user-network interface may correspond to a number of possible events such as the following:

- a) physical disconnection of user equipment and reconnection;
- b) physical replacement of one user equipment by another;
- c) the human user moves from one equipment to another;
- d) suspension of call and its subsequent reactivation at the same user equipment.

These procedures have only local significance, i.e. the invocation of call rearrangement affects only states at the originating end, and it does not affect any terminating states.

The procedures in this subsection are described in terms of functional messages and information elements.

If the procedures for call suspension in this subsection are not followed prior to the physical disconnection of the terminal from the interface, then the integrity of the call cannot be guaranteed by the network.

5.6.1 Call suspension

The procedure is initiated by the user, who shall send a SUSPEND message containing the current call reference; start timer T319, and enter the Suspend Request state. The user may optionally include in this message a bit sequence (e.g. IA5 characters) to be known by the application or human user, and by the network, as the call identity for subsequent reconnection. Where no call identity information is included by the user, (e.g. the Call identity information element is absent or empty) the network shall store this fact so that resumption is possible only by a procedure conveying no call identity information.

NOTE – If the Call identity information element is present with a null length, the message shall be handled as if it was absent.

The default maximum length of the call identity value within the Call identity information element is eight octets. If the network receives a call identity value longer than the maximum length supported, the network shall truncate the call identity value to the maximum length; take the action specified in 5.8.7 and continue processing.

5.6.2 Call suspended

Following the receipt of a SUSPEND message the network enters the Suspend Request state. After a positive validation of the received call identity the network shall send a SUSPEND ACKNOWLEDGE message, and start timer T307. (The value of T307 is specified in 9.1.)

At this time, the network shall consider the call reference to be released and enter the Null state for that call reference. The call identity associated with the suspended call has to be stored by the network and cannot be accepted for another suspension until it is released.

The B-channel involved in the connection will be reserved by the network until reconnection of the call (or until a clearing cause occurs, e.g. expiry of timer T307). A NOTIFY message with notification indicator No. 0 (user suspended) is sent to the other user.

When the user receives the SUSPEND ACKNOWLEDGE message, the user shall stop timer T319, release the B-channel and call reference, and enter the Null state.

Following the receipt of the SUSPEND ACKNOWLEDGE message, the user may disconnect the underlying data link connection. In any case, if the user physically disconnects from the interface without having disconnected the data link connection, standard data link layer procedures are started by the network side of the data link layer supervision, resulting in the release of the data link layer connection.

5.6.3 Call suspend error

If the network does not support the call rearrangement procedures, it shall reject a SUSPEND message according to the error handling procedures of 5.8.4. If the network supports the call rearrangement procedures on a subscription basis, but the user does not subscribe to the service, the network shall reject a SUSPEND message with cause No. 50, *requested facility not subscribed*; the Cause information element shall not contain a diagnostic field under these circumstances.

On receipt of a SUSPEND message, the network will respond by sending a SUSPEND REJECT message with cause No. 84, *call identity in use* if the information contained in the SUSPEND message is not sufficient to avoid ambiguities on subsequent call re-establishment. This will apply, in particular, when at a given user-network interface, a SUSPEND message is received with a call identity sequence already in use, or when the SUSPEND message does not contain any call identity sequence and the null-value call identity is already allocated for that interface. On receipt of the SUSPEND REJECT message, the user shall stop timer T319, and return to the active state. If timer T319 expires, the user shall notify the user application and return to the Active state.

In these cases the state of the call is not altered within the network (i.e. it remains in the Active state).

5.6.4 Call re-establishment

At the connection end where suspension was initiated, the user may request re-establishment of a call after physical reconnection of a terminal by sending a RESUME message containing the call identity exactly as that used at the time of call suspension; starting timer T318, and entering the Resume Request state. If the SUSPEND message did not include a Call identity information element, then the corresponding RESUME message shall also not include a Call identity information element. The call reference included in the RESUME message is chosen by the user according to the normal allocation of outgoing call reference (see 4.3).

On receipt of a RESUME message, the network enters the Resume Request state. After a positive validation of the call identity that relates to the suspended call containing a valid identity that relates to a currently suspended call, the network shall, send a RESUME ACKNOWLEDGE message to the user; release the call identity; stop timer T307 and enter the Active state. The RESUME ACKNOWLEDGE message shall specify the B-channel reserved to the call by the network by means of the channel identification element, coded *B-channel is indicated, no alternative is acceptable*.

The network shall also send a NOTIFY message with the notification indicated *user resumed* to the other user.

No memory of the previously received call identity sequence is kept by the network after sending the RESUME ACKNOWLEDGE message. This call identity is now available for another suspension.

On receipt of the RESUME ACKNOWLEDGE message, the user shall, stop timer T318 and enter the Active state.

No compatibility is performed during the call arrangement phase.

5.6.5 Call resume errors

If the network does not support the call rearrangement procedures, it shall reject a RESUME message according to the error handling procedures of 5.8.3.2 a). For this purpose, the RESUME message would be deemed to be an unrecognized message.

If a received RESUME message cannot be actioned by the network (e.g. as a result of an unknown call identity, a RESUME REJECT message shall be returned to the requesting user indicating one of the following causes:

- a) No. 83 – *A suspended call exists, but this call identity does not;*
- b) No. 85 – *No call suspended;* or
- c) No. 86 – *Call having the requested call identity has been cleared.*

The call identity remains unknown. The call reference contained in the RESUME message is released by both the user and network side. Upon receipt of the RESUME REJECT message the user shall, stop timer T318, and enter the Null state. If timer T307 expires the network shall initiate clearing of the network connection with cause No. 102, *recovery on timer expiry*; discard the call identity and release the reserved B-channel.

On release, the call identity can then be used for subsequent call suspension. If before the expiry of timer T307 the call is cleared by the remote user, the B-channel reservation is released but the call identity may be preserved by some networks along with a clearing cause (e.g. cause No. 16, *normal clearing*).

If timer T318 expires, the user shall initiate call clearing in accordance with 5.3.2 f).

5.6.6 Double suspension

Simultaneous suspension of the call at both ends is possible. The procedures do not prevent this from occurring. If double suspensions are not desired the users must protect against this by other means, e.g. higher layer negotiation protocols.

5.6.7 Call re-arrangement notification controlled by an NT2

When the call rearrangement is controlled by the NT2, the procedures shall be applied by the NT2 at reference point S. The NT2 shall inform the remote user by sending a NOTIFY message described in 5.6.2 and 5.6.4 across reference point T.

5.7 Call collisions

Call collisions as such cannot occur at the network. Any simultaneous incoming or outgoing calls are dealt with separately and assigned different call references.

Channel selection conflicts may occur if an incoming call and outgoing call select the same channel. This is resolved by the network through channel selection mechanisms described in 5.1.2 and 5.2.2.

In the case of such conflicts, the network shall give priority to the incoming call over the call request received from the user. It shall clear the outgoing call whenever the B-channel cannot be, allocated by the network or accepted by the user originating the call.

NOTE – Some terminal adaptors supporting existing non-voice terminals (e.g. Recommendation X.21) may need to resolve double channel selection by clearing the incoming call and reattempting the outgoing call setup in order to satisfy the requirements of the interface at reference point R.

5.8 Handling of error conditions

All procedures transferring signalling information by using the protocol discriminator of Q.931 user-network call control messages are applicable only to those messages which pass the checks described in 5.8.1 through 5.8.7. The error handling procedures of 5.8.1 through 5.8.7 apply to messages using an ordinary call reference or the global call reference, except where otherwise noted.

Detailed error handling procedures are implementation dependent and may vary from network to network. However, capabilities facilitating the orderly treatment of error conditions are provided for in this section and shall be provided in each implementation.

Subclauses 5.8.1 through 5.8.7 are listed in order of precedence.

5.8.1 Protocol discrimination error

When a message is received with a protocol discriminator coded other than *Q.931 user-network call control message*, that message shall be ignored, means to do nothing, as if the message had never been received.

5.8.2 Message too short

When a message is received that is too short to contain a complete message type information element, that message shall be ignored.

5.8.3 Call reference error

5.8.3.1 Invalid Call reference format

If the Call reference information element octet 1, bits 5 through 8 do not equal 0000, then the message shall be ignored.

If the Call reference information element octet 1, bits 1 through 4 indicate a length greater than the maximum length supported by the receiving equipment (see 4.3), then the message shall be ignored.

When a message is received with the dummy call reference it shall be ignored unless it is required for a supplementary service (see Recommendation Q.932 [4]).

5.8.3.2 Call reference procedural errors

Only item f) applies to messages using the global call reference.

- a) Whenever any message except SETUP, RELEASE, RELEASE COMPLETE, STATUS, STATUS ENQUIRY or (for networks supporting the call rearrangement procedures of 5.6) RESUME is received specifying a call reference which it does not recognize as relating to an active call or a call in progress, clearing is initiated by sending a RELEASE message with cause No. 81, "invalid call reference value" and following the procedures in 5.3, specifying the call reference in the received message.

Alternatively, the receiving entity may send a RELEASE COMPLETE message with cause No. 81, "invalid call reference value" and remain in the Null state. [Telecom implements this alternate procedure.](#)

- b) When a RELEASE message is received that specified a call reference which is not recognized as relating to an active call or a call in progress, a RELEASE COMPLETE message with cause No. 81, "invalid call reference value" is returned, specifying the call reference in the received message.
- c) When a RELEASE COMPLETE message is received specifying a call reference which it does not recognize as relating to an active call or a call in progress, no action should be taken.
- d) When a SETUP or RESUME message is received specifying a call reference which is recognized as relating to an active call or to a call in progress, and with a call reference flag incorrectly set to "1", that message shall be ignored.
- e) When a SETUP message is received specifying a call reference which is recognized as relating to an active call, or a call in progress, this SETUP message shall be ignored.
- f) When any message except RESTART, RESTART ACKNOWLEDGE, or STATUS is received using the global call reference, no action should be taken on this message and a STATUS message using the global call reference with a call state indicating the current state associated with the global call reference and cause No. 81 "invalid call reference value" shall be returned.
- g) When a STATUS message is received specifying a call reference which is not recognized as relating to an active call or to a call in progress, the procedures of 5.8.11 shall apply.
- h) When a STATUS ENQUIRY message is received specifying a call reference which is not recognized as relating to an active call or to a call in progress, the procedures of 5.8.10 shall apply.

NOTE – Some implementations conforming to Recommendation Q.931 (1988) may choose to initiate clearing by sending a RELEASE message with cause No. 81 *invalid call reference value* and continue to follow the procedures in 5.3, specifying the call reference in the received message, or respond with a RELEASE COMPLETE message with cause No. 81, *invalid call reference value* and remain in the Null state.

5.8.4 Message type or message sequence errors

Whenever an unexpected message, except RELEASE or RELEASE COMPLETE, or unrecognized message is received in any state other than the Null state, a STATUS message shall be returned with cause No. 98, *message not compatible with call state or message type non-existent or not implemented* and the corresponding diagnostic. If a network or user can distinguish between unimplemented (or non-existent) message types and implemented message types which are incompatible with the call state, then a STATUS message may be sent with one of the following causes:

- a) cause No. 97 *message type non-existent or not implemented*; or
- b) cause No. 101 *message not compatible with call state*.

Alternatively, a STATUS ENQUIRY message may be sent requesting the call state of the entity (see 5.8.10). No change in state shall be made in either case at this time. This alternative is not applicable to messages using the global call reference.

However, two exceptions to this procedure exist. The first exception is when the network or the user receives an unexpected RELEASE message (e.g. if the DISCONNECT message was corrupted by undetected transmission errors). In this case no STATUS or STATUS ENQUIRY message is sent. Whenever the network receives an unexpected RELEASE message, the network shall disconnect and release the B-channel; clear the network connection and the call to the remote user with the cause in the RELEASE message sent by the user or, if not included, cause No. 31, *normal, unspecified*;

return a RELEASE COMPLETE message to the user; release the call reference, stop all timers and enter the Null state. Whenever the user receives an unexpected RELEASE message, the user shall disconnect and release the B-channel; return a RELEASE COMPLETE message to the network; release the call reference; stop all timers, and enter the Null state.

The second exception is when the network or the user receives an unexpected RELEASE COMPLETE message. Whenever the network receives an unexpected RELEASE COMPLETE message, the network shall disconnect and release the B-channel; clear the network connection and the call to the remote user with the cause indicated by the user or, if not included, cause No. 111, *protocol error, unspecified*; release the call reference; stop all timers and enter the Null state. Whenever the user receives an unexpected RELEASE COMPLETE message, the user shall disconnect and release the B-channel; release the call reference; stop all timers, and enter the Null state.

5.8.5 General information element errors

The general information element error procedures may also apply to information elements in codesets other than 0. In that case, the diagnostics in the cause information element may indicate information elements other than those in codeset 0 by applying the locking or non-locking shift procedures as described in 4.5.

5.8.5.1 Information element out of sequence

A variable length information element which has a code value lower than the code value of the variable length information element preceding it shall be considered as an out of sequence information element.

If the network or user receives a message containing an out of sequence information element, it may ignore this information element and continue to process the message. If this information is mandatory, and the network or user chooses to ignore this out of sequence information element, then the error handling procedure for missing mandatory information elements as described in 5.8.6.1 shall be followed. If the ignored information element is non-mandatory, the receiver continues to process the message.

NOTE – Some implementations may choose to process all the information elements received in a message regardless of the order in which they are placed.

5.8.5.2 Duplicated information elements

If an information element is repeated in a message in which repetition of the information element is not permitted, only the contents of information element appearing first shall be handled and all subsequent repetitions of the information element shall be ignored. When repetition of information elements is permitted, only the contents of permitted information elements shall be handled. If the limit on repetition of information elements is exceeded, the contents of information elements appearing first up to the limit of repetitions shall be handled and all subsequent repetitions of the information element shall be ignored.

5.8.6 Mandatory information element errors

5.8.6.1 Mandatory information element missing

When a message other than SETUP, DISCONNECT, RELEASE or RELEASE COMPLETE is received which has one or more mandatory information elements missing, no action should be taken on the message and no state change should occur. A STATUS message is then returned with cause No. 96, *mandatory information element is missing*.

When a SETUP or RELEASE message is received which has one or more mandatory information elements missing, a RELEASE COMPLETE message with cause No. 96, *mandatory information element is missing* shall be returned.

When a DISCONNECT message is received with the cause information element missing, the actions taken shall be the same as if a DISCONNECT message with cause No. 31, *normal, unspecified* was received (see 5.3), with the exception that the RELEASE message sent on the local interface contains cause No. 96, *mandatory information element is missing*. When a RELEASE COMPLETE message is received with a cause information element missing, it will be assumed that a RELEASE COMPLETE message was received with cause No. 31, *normal, unspecified*.

5.8.6.2 Mandatory information element content error

When a message other than SETUP, DISCONNECT, RELEASE, or RELEASE COMPLETE is received which has one or more mandatory information elements with invalid content, no action should be taken on the message and no state change should occur. A STATUS message is then returned with cause No. 100, "invalid information element contents".

When a SETUP or RELEASE message is received which has one or more mandatory information elements with invalid content, a RELEASE COMPLETE message with cause No. 100, "invalid information element contents" shall be returned.

When a DISCONNECT message is received with invalid content of the Cause information element, the actions shall be the same as if a DISCONNECT message with cause No. 31, "normal, unspecified" was received (see 5.3), with the exception that the RELEASE message sent on the local interface contains cause No. 100, "invalid information element contents".

When a RELEASE COMPLETE message is received with invalid content of the Cause information element, it will be assumed that a RELEASE COMPLETE message was received with cause No. 31, "normal, unspecified".

Information elements with a length exceeding the maximum length (given in 3) shall be treated as an information element with content error.

NOTE – As an option of the user equipment (e.g. NT2), cause values, location codes, and diagnostics which are not understood by the NT2 may be passed on to another entity (e.g. user or NT2) instead of treating the cause value as if it were cause No. 31, *normal, unspecified* and sending cause No. 100, *invalid information element contents* with the RELEASE message. This option is intended to aid user equipment to be compatible with future additions of cause values, location codes and diagnostics to the Recommendation.

5.8.7 Non-mandatory information element errors

The following subclauses identify actions on information elements not recognized as mandatory.

5.8.7.1 Unrecognized information element

When a message is received which has one or more unrecognized information elements, the receiving entity shall check whether any are encoded to indicate “comprehension required” (refer to Table **Error! Reference source not found.** for information element identifiers reserved with this meaning). If any unrecognized information element is encoded to indicate “comprehension required” then the procedures in 5.8.6.1 are followed, i.e. as if a “missing mandatory information element” error condition had occurred. If all unrecognized information elements are **not** encoded to indicate “comprehension required”, then the receiving entity shall proceed as follows:

Action shall be taken on the message and those information elements which are recognized and have valid content. When the received message is other than DISCONNECT, RELEASE or RELEASE COMPLETE, a STATUS message may be returned containing one cause information element. The STATUS message indicates the call state of the receiver after taking action on the message. The Cause information element shall contain cause No. 99, “information element non-existent or not implemented”, and the diagnostic field, if present, shall contain the information element identifier for each information element which was unrecognized.

Subsequent actions are determined by the sender of the unrecognized information elements. If a clearing message contains one or more unrecognized information elements, the error is reported to the local user in the following manner:

- a) When a DISCONNECT message is received which has one or more unrecognized information elements, a RELEASE message with cause No. 99, “information element non-existent or not implemented”, shall be returned. The Cause information element diagnostic field, if present, shall contain the information element identifier for each information element which was unrecognized.
- b) When a RELEASE message is received which has one or more unrecognized information elements, a RELEASE COMPLETE message with cause No. 99 “information element non-existent or not implemented”, shall be returned. The Cause information element diagnostic field, if present, shall contain the information element identifier for each information element which was unrecognized.
- c) When a RELEASE COMPLETE message is received which has one or more unrecognized information elements, no action shall be taken on the unrecognized information.

NOTE – The diagnostic(s) of cause No. 99 facilitates the decision in selecting an appropriate recovery procedure at the reception of a STATUS message. Therefore, it is recommended to provide cause No. 99 with diagnostic(s) if a layer 3 entity expects the peer to take an appropriate action at the receipt of a STATUS message, although inclusion of diagnostic(s) is optional.

5.8.7.2 Non-mandatory information element content error

When a message is received which has one or more non-mandatory information elements with invalid content, action shall be taken on the message and those information elements which are recognized and have valid content. A STATUS message may be returned containing one Cause information element. The STATUS message indicates the call state of the receiver after taking action on the message. The Cause information element shall contain cause No. 100 “invalid information element contents”, and the diagnostic field, if present, shall contain the information element identifier for each information element which has invalid contents.

Information elements with a length exceeding the maximum length (given in 3) will be treated as an information element with content error. But for access information elements (e.g. User-user information element, Called party subaddress information element), cause No. 43, “access information discarded” is used instead of cause No. 100 “invalid information element contents”. However, in some networks, access information elements may be truncated and processed.

The Call identity information element shall have a special treatment and shall be truncated and processed in the case that it exceeds the maximum length implemented.

NOTE – As an option of user equipment (e.g. NT2), cause values, location codes, and diagnostics which are not understood by the NT2 may be accepted, or in the case of an NT2, passed on to another entity (e.g. user or NT2) instead of ignoring the cause information element contents and optionally sending a STATUS message with cause No. 100, *invalid information element contents*. This option is intended to aid user equipment to be compatible with future additions of cause values, location codes and diagnostics to the Recommendation.

5.8.7.3 Unexpected recognized information element

When a message is received with a recognized information element that is not marked as comprehension required and is not defined to be contained in that message, the receiving entity shall (except as noted below) treat the information

element as an unrecognized information element and follow the procedures defined in 5.8.7.1. When a message is received with a recognized information element that is marked as comprehension required and is not defined to be contained in that message, the receiving entity shall follow the procedures of 5.8.6.1.

NOTE – Some implementations may choose to process unexpected recognized information elements when the procedure for processing the information element is independent of the message in which it is received. The network applies normal error handling and will return a STATUS message.

5.8.8 Data link reset

Whenever a Q.931 entity is informed of a spontaneous data link layer reset by means of the DL-ESTABLISH indication primitive, the following procedures apply:

- a) For calls in the Overlap Sending and Overlap Receiving states, the entity shall initiate clearing by sending a DISCONNECT message with cause No. 41, *temporary failure*, and following the procedures of 5.3.
- b) For calls in the disestablishment phase (states N11, N12, N19, N22, U11, U12 and U19), no action shall be taken.
- c) Calls in the establishment phase (states N1, N3, N4, N6, N7, N8, N9, U1, U3, U4, U6, U7, U8 and U9) and in the Active, Suspend Request, and Resume Request states shall be maintained according to the procedures contained in other parts of 5.

5.8.9 Data link failure

Whenever the network layer entity is notified by its data link layer entity via the DL-RELEASE indication primitive that there is a data link layer malfunction, the following procedure shall apply:

- a) Any calls not in the Active state shall be cleared internally.
- b) For any call in the Active state a timer T309 shall be started (if implemented).

If timer T309 is already running, it shall not be restarted.

The Q.931 entity shall request layer 2 reestablishment by sending a DL-ESTABLISH request primitive.

When informed of layer 2 re-establishment by means of the DL-ESTABLISH confirmation primitive, the following procedure shall apply:

the Q.931 entity shall stop timer T309, and either:

- the Q.931 entity shall send a STATUS message with cause No. 31, *normal, unspecified* to report the current state to the peer entity; or
- the Q.931 entity shall perform the status enquiry procedure according to 5.8.10 to verify the call state of the peer entity.

If timer T309 expires prior to data link reestablishment, the network shall clear the network connection and call to the remote user with cause No. 27, *destination out of order*; disconnect and release the B-channel; release the call reference, and enter the Null state.

If timer T309 expires prior to data link reestablishment, the user shall clear the attached connection (if any) with cause No. 27, *destination out of order*; disconnect and release the B-channel; release the call reference, and enter the Null state.

When a back-up D-channel is available, the procedures in Annex F may be used.

The implementation of timer T309 in the user side is optional and in the network side is mandatory.

When a Q.931 entity internally clears the call as a result of data link failure, as an option, it may request the reestablishment of the data link in order to attempt to send a DISCONNECT message across the interface.

5.8.10 Status enquiry procedure

Whenever an entity wishes to check the correctness of a call state at a peer entity, a STATUS ENQUIRY message may be sent requesting the call state. This may, in particular, apply to procedural error conditions described in 5.8.8 and 5.8.9. Upon sending the STATUS ENQUIRY message, timer T322 shall be started in anticipation of receiving a STATUS message. While timer T322 is running, only one outstanding request for call state information shall exist. Therefore, if timer T322 is already running, it shall not be restarted. If a clearing message is received before timer T322 expires, timer T322 shall be stopped, and call clearing shall continue.

Upon receipt of a STATUS ENQUIRY message, the receiver shall respond with a STATUS message, reporting the current call state (the current state of an active call or a call in progress, or the Null state if the call reference does not relate to an active call or to a call in progress) and cause No. 30, *response to STATUS ENQUIRY* or No. 97, *message type non-existent or not implemented* (see 5.8.4). Receipt of the STATUS ENQUIRY message does not result in a state change.

Cause No. 30 shall be used when the status enquiry procedure is implemented.

The sending or receipt of the STATUS message in such a situation will not directly affect the call state of either the sender or receiver. The side having received the STATUS message shall inspect the Cause information element. If the STATUS message contains cause No. 97, *message type non-existent or not implemented*, timer T322 shall continue to time for an explicit response to the STATUS ENQUIRY message. If a STATUS message is received that contains cause No. 30, *response to status enquiry*, timer T322 shall be stopped and the appropriate action taken, based on the information in that STATUS message, relative to the current state of the receiver. If timer T322 expires and a STATUS message with cause No. 97, *message type non-existent or not implemented* was received, the appropriate action shall be taken, based on the information in that STATUS message, relative to the current call state of the receiver.

These further *appropriate actions* are implementation dependent. However, the actions prescribed in the following subclause shall apply.

If timer T322 expires, and no STATUS message was received, the STATUS ENQUIRY message may be retransmitted one or more times until a response is received. The number of times the STATUS ENQUIRY message is retransmitted as an implementation dependent value. The call shall be cleared to the local interface with cause No. 41, *temporary failure*, if the STATUS ENQUIRY is retransmitted the maximum number of times. If appropriate, the network shall also clear the network connection, using cause No. 41, *temporary failure*.

5.8.11 Receiving a STATUS message

On receipt of a STATUS message reporting an incompatible state, the receiving entity shall

- a) clear the call by sending the appropriate clearing message with cause No. 101, *message not compatible with call state*; or
- b) take other actions which attempt to cover from a mismatch and which are an implementation option.

Except for the following rules, the determination of which states are incompatible is left as an implementation decision:

- a) If a STATUS message indicating any call state except the Null state is received in the Null state, then the receiving entity shall either
 - 1) send a RELEASE message with cause No. 101, *message not compatible with call state*, and then follow the procedures of 5.3; or
 - 2) send a RELEASE COMPLETE message with cause No. 101, *message not compatible with call state*; and remain in the Null state.
- b) If a STATUS message indicating any call state except the Null state is received in the release request state, no action shall be taken.
- c) If a STATUS message, indicating the Null state, is received in any state except the Null state, the receiver shall release all resources and move into the Null state.

When in the Null state, the receiver of a STATUS message indicating the Null state shall take no action other than to discard the message and shall remain in the Null state.

A STATUS message may be received indicating a compatible call state but containing one of the following causes:

- i) No. 96 – *Mandatory information element is missing*;
- ii) No. 97 – *Message type non-existing or not implemented*;
- iii) No. 99 – *Information element non-existent or not implemented*; or
- iv) No. 100 – *Invalid information element contents*.

In this case the actions to be taken are an implementation option. If other procedures are not defined, the receiver shall clear the call with the appropriate procedure defined in 5.3, using the cause specified in the received STATUS message.

On receipt of a STATUS message specifying the global call reference and reporting an incompatible state in the restart request or restart state, the receiving Q.931 entity shall inform layer management and take no further action on this message.

When in the Null state, then on receipt of a STATUS message with the global call reference no action shall be taken.

NOTE – Further actions as a result of higher layer activity (e.g. system or layer management) and implementation dependent (including the retransmission of RESTART).

Except for the above case, the error handling procedures when receiving a STATUS message specifying the global call reference are an implementation option.

5.9 User notification procedure

This procedure allows the network to notify a user of any appropriate call-related event during the active state of a call. It also allows a user to notify the remote user of any appropriate call-related event during the active state of a call by sending a NOTIFY message containing a notify indicator to the network; upon receipt of this message, the network must send a NOTIFY message containing the same notify indicator to the other user involved in the call. No state change occurs at any of the interface sides following the sending or the receipt of this message.

The network may also send a NOTIFY message during other states of a call for the support of supplementary services. See Part C for further details. The ability to receive a NOTIFY message in these states is mandatory.

5.10 Basic telecommunication service identification and selection

Procedures for bearer capability selection are described in 5.11 and procedures for high layer compatibility selection are described in 5.12.

Basic telecommunication service identification and selection is not currently implemented by Telecom. This section has not been reproduced.

5.11 Signalling procedures for bearer capability selection

The procedures in this subclause form an optional part of this Specification, but are a mandatory requirement for the provision of certain bearer services or teleservices. Provision of these procedures between the originating user and the originating network, and also between the destination network and the destination user, is thus subject to bilateral agreement, e.g. a subscription arrangement for the provision of that bearer service or teleservice to each user.

Bearer capability selection is not currently implemented by Telecom. This section has not been reproduced.

5.12 Signalling procedures for high layer compatibility selection

The procedures in this subclause form an optional part of this Specification, but are a mandatory requirement for the provision of certain teleservices. Provision of these procedures between the originating user and the originating network, and also between the destination network and the destination user is thus subject to bilateral agreement, e.g. a subscription arrangement for the provision of that teleservice to each user.

High layer compatibility selection is not currently implemented by Telecom. This section has not been reproduced.